

Accessories

C0-USER-M <--->

CLICK PLC Hardware User Manual

Manual covers all CLICK CPU and I/O Module installation and wiring, specifications, error codes and trouble shooting guide. Sold separately from hardware.

The CLICK PLC Hardware User Manual can be downloaded free at the *AutomationDirect* Web site, or purchased from the *AutomationDirect* online web store. www.automationdirect.com



EA-MG-PGM-CBL <--->

PC to Panel Programming Cable Assembly for C-more Micro-Graphic Panels and CLICK PLCs

6-ft. cable assembly to connect a personal computer to any C-more Micro-Graphic panel or CLICK PLC for setup and programming.

Note: This cable assembly uses the PC's USB port and converts the signals to serial transmissions. The USB port supplies 5 VDC to the Micro-Graphic panel for configuration operations.

Assembly includes standard USB A-type connector to B-type connector cable, custom converter, and a RS232C cable with RJ12 modular connector on each end.



D2-DSCBL <--->

Programming Cable for CLICK and DirectLOGIC PLCs

12 ft. (3.66m) RS232 shielded PC programming cable for CLICK, DL05, DL06, DL105, DL205, D3-350, and D4-450 CPUs. 9-pin D-shell female connector to an RJ12 6P6C connector.



C0-4TB <--->

Spare 24 VDC Power Terminal Block


Replacement terminal block for the 24 VDC supply power to the CPU. Sold in packs of 2.



C0-8TB <--->

Spare 8-Point I/O Terminal Block

 Replacement terminal block for the 8-point I/O modules. Sold in packs of 2.



C0-16TB <--->

Spare 16-Point I/O Terminal Block

Replacement terminal block for the 16-point I/O modules and CPU built-in I/O.

.Sold in packs of 2.



DN-SS1 <--->

Insulated Slotted Screwdriver 0.4 x 2.5 x 75 mm



DN-WS <--->

Wire Stripper



DN-EB35MN <--->

DINnectors End Bracket



C-more and C-more Micro Graphic Operator Interfaces



ZIPLink Wiring Systems

